

Xiamen Rizheng Industry Co.,Ltd

New Crochet Hook Kit sets Assembly Instructions

Required Accessories


- 7mm Pen Mandrel
- 7mm Drill Bit RZ-DB007
- Barrel Trimmer
- 2 pcs Bushings Set RZ-PK538#-BU
- Glue (Thick CA or Epoxy)



Preparing the Blank

- Prepare and cut a blank of 3/4" or larger, to the length of the brass tube (add 1/16" for trimming)
- Drill a 7mm hole through the center of the blank.
- Spread glue over the tube, insert into blank with a twisting motion to spread the glue evenly inside.
- Center the tube inside the blank.
- When glue is dry. Trim the ends of the blank flush to the tube.

Diagram B

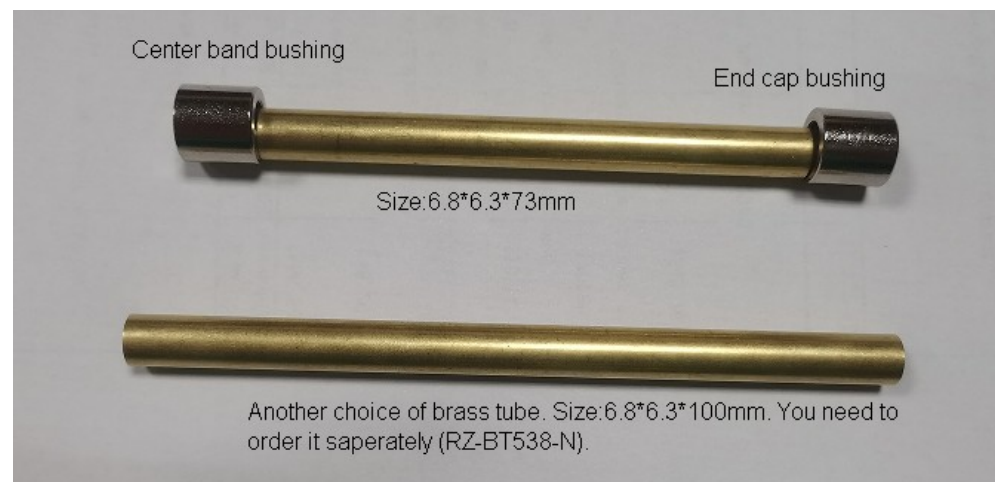


Turning the Blank

- Place the bushings and blank on the mandrel according to Diagram B.
- Thread on the knurled nut and hand tighten to hold all items in place.
- Slide the tailstock to the mandrel shaft, (do not overtighten, it could damage the mandrel) lock in place.
- Turn the handle ends down, flush with the bushings using the lathe tools,

gradually increasing the grades of sand paper.

- Finish the wood with friction polishing. .

Diagram A

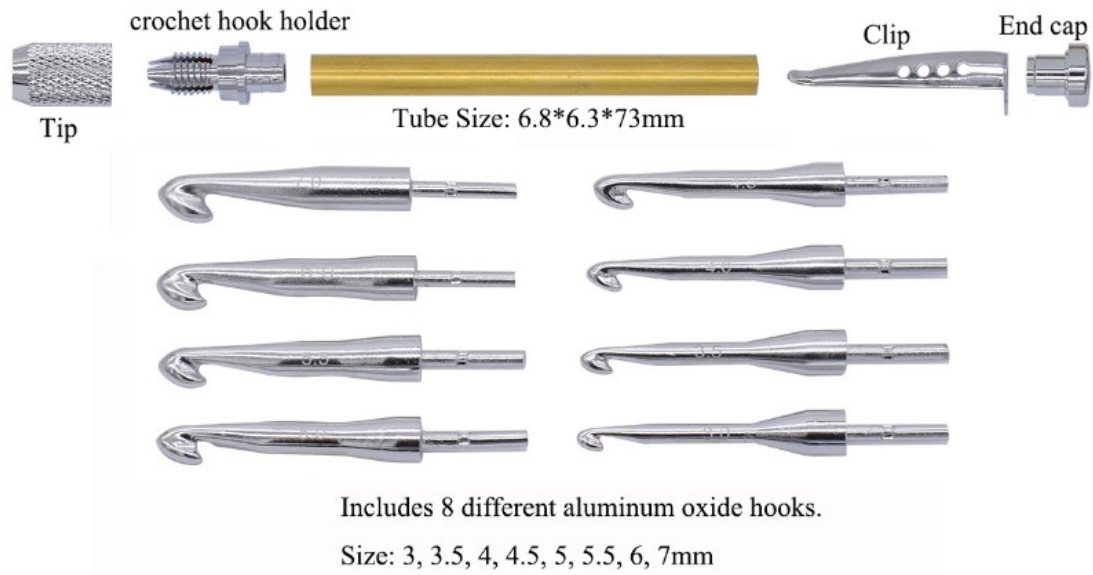

Assembly

- NOTE: Line up the components according to DIAGRAM A.
- Press the cap and clip assembly to one end of the tube.
- Press the crochet hook holder into the other end of tube.
- Screw the tip to the crochet hook holder a little. Then insert the hook into the holder and screw the tip tighter. There are 8 different sizes hooks for your choice.

Please don't insert the hook into the holder to the end one time and screw. You need to push the hook into the holder a little and screw it, then push it into a little and screw tighter.